V1.0

Lenco

MCI-400

MUSIC CENTER WITH iPod DOCKING STATION, CASSETTE, FM RADIO, CD/MP3 PLAYER AND USB- & CARDSLOT

INSTRUCTION MANUAL

For information and support, www.lenco.eu

LOCATION OF CONTROLS

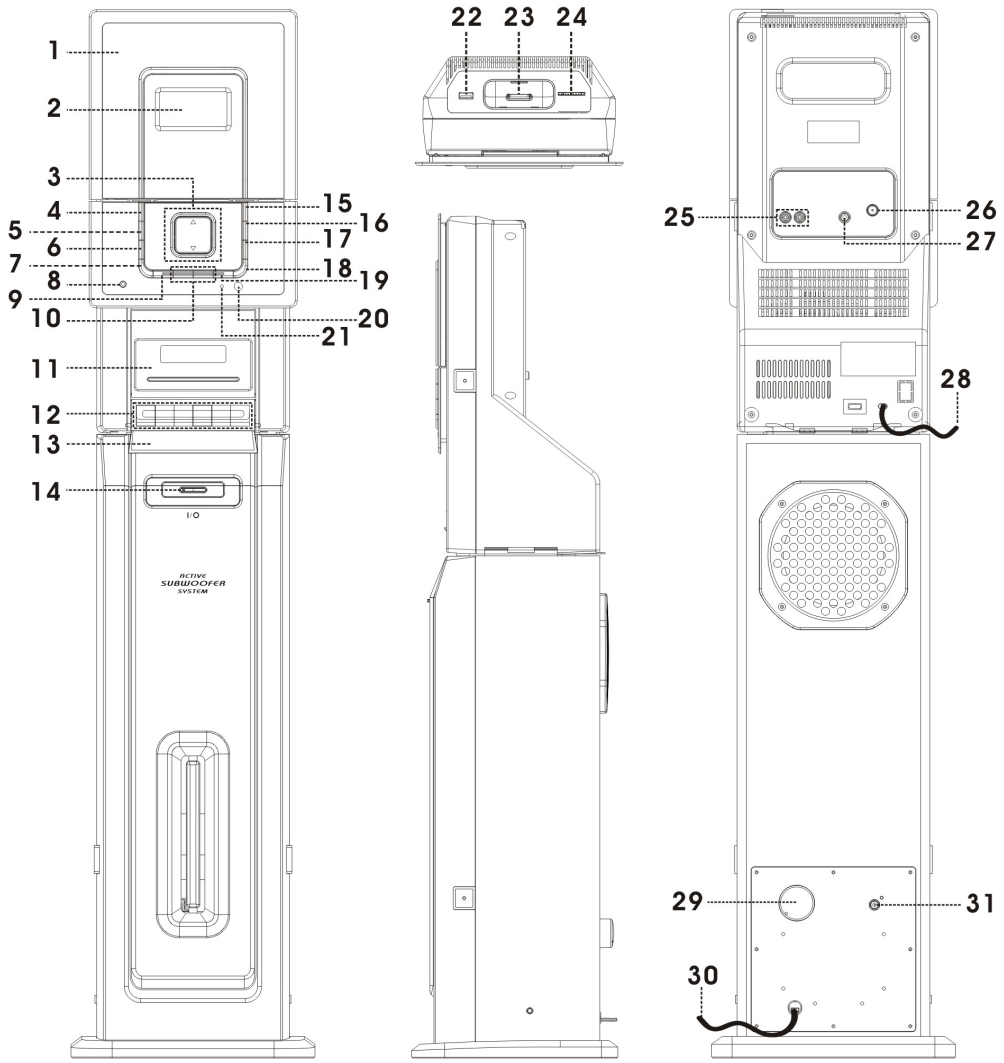

1) CD DOOR
2) LCD DISPLAY
3) VOLUME UP/DOWN BUTTON
4) CD DOOR OPEN/CLOSE BUTTON
5) PRESE BUTTON
6) ALARM BUTTON
7) PLAY MODE BUTTON
8) 3.5MM STEREO HEADPHONE JACK
9) STOP ■ BUTTON
10) SKIP / TUNING UP ⏭/DOWN ⏮BUTTON
11) CASSETTE DECK DOOR
12) CASSETTE CONTROL KEY
    - ● RECORD KEY
    - ► PLAYBACK KEY
    - ◄◄ REWIND KEY
    - ►► FAST FORWARD KEY
    - ■⏏ STO/EJECT KEY
    - ▮▮ PAUSE KEY
13) CASSETTE KEY DUST COVER
14) SUB-WOOFER POWER ON/OFF BUTTON/INDICATOR
15) MAIN UNIT ON / OFF BUTTON
16) FUNCTION BUTTON
17) MEMORY/CLOCK ADJUST BUTTON
18) MP3 FOLDER UP/ PRE-UP
19) ST-MONO / PLAY/PAUSE ⏯ BUTTON
20) REMOTE SENSOR
21) STANDBY LED INDICATOR
22) USB SOCKET
23) iPod DOCKING STATION
24) SD/MMC CARD SLOT
25) SPEAKER OUT TERMINAL (L/R)
26) FM 75 OHM ANTENNA JACK
27) SUB-WOOFER OUT JACK
28) AC POWER CORD OF MAIN UNIT
29) SUB-WOOFER VOLUME CONTROL
30) AC POWER CORD OF SUB-WOOFER UNIT
31) SUB-WOOFER IN JACK

CAUTION:
USAGE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
THIS UNIT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT QUALIFIED SERVICE PERSONNEL.

IMPORTANT:
SINCE MOVEMENT OF THE CD MECHANISM AND THE SENSITIVE CIRCUITY MAY CAUSE INTERFERENCE TO THE RADIO TUNER NEARBY, SWITCH THIS UNIT OFF WHILE OPERATING OTHER RADIO DEVICES.

PRECAUTIONS FOR USE

INSTALLATION

- UNPACK ALL PARTS AND REMOVE PROTECTIVE MATERIAL.
- DO NOT CONNECT THE UNIT TO THE MAINS BEFORE CHECKING THE MAIN VOLTAGE AND BEFORE ALL OTHER CONNECTIONS HAVE BEEN MADE.
- DO NOT COVER ANY VENTS AND MAKE SURE THAT THERE IS A SPACE OF SEVERAL CENTIMETERS AROUND THE UNIT FOR VENTILATION.

QUICK GUIDE CONNECTION

PLEASE FOLLOW THE FOLLOWING STEPS AND PROCEDURES TO SET UP YOUR MUSIC TOWER

I) MAIN UNIT + SUN-WOOFER CONNECTION

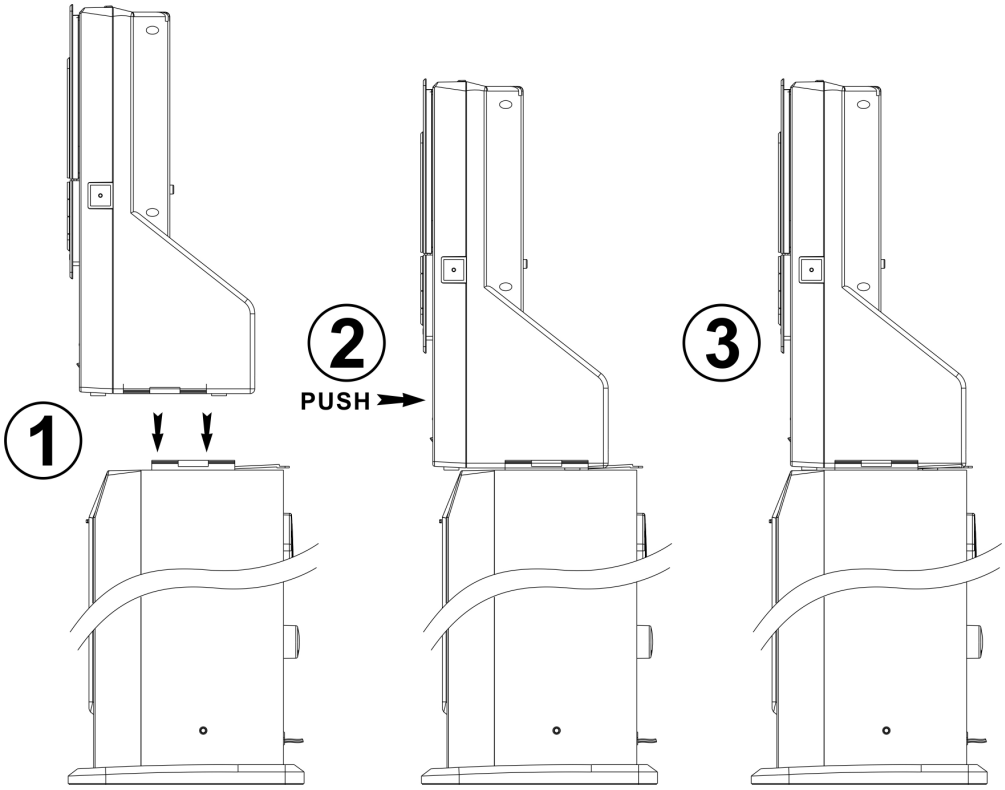

1) PLACE THE MAIN UNIT VERTICALLY DOWN TO THE SUB-WOOFER TOP AS SHOW ON PICTURE ①
2) PULL THE MAUN UNIT BACKWARD UNIT THE BRACKET HOOK UP & TIGHTLY AS SHOW ON PICTURE ②.
3) TRY TO LIFT UP THE WHOLE SYSTEM AND CHECK WHETHER THE MAIN UNIT & SUB-WOOFER ARE BEING COMBINED TIGHTLY.

II) WIRE CONNECTION

1) CONNECT THE END OF THE SPEAKER CABLE TO THE SPEAKER OUT TERMINAL (RED & WHITE HEAD) (25) AT THE BACK OF MAIN UNIT, ANOTHER TERMINAL CONNECT TO THE SPEAKER CLIP OF THE SPEAKER BOX BACK SIDE(RED COLOR OF SPEAKER CABLE TO RED COLOR OF SPEAKER CLIP)

2) CONNECT ONE END OF THE RCA CABLE (YELLOW HEAD) TO THE SUB-WOOFER OUT JACK (27) AT THE BACK OF MAIN UNIT TO THE SUB-WOOFER IN JACK (31) AT THE BACK OF THE SUB-WOOFER

3) CONNECT THE 75 OHM ANTENNA JACK(26) VIA A 75 OHM CABLE(NOT PROVIDED) TO GET THE FM RECEPTION

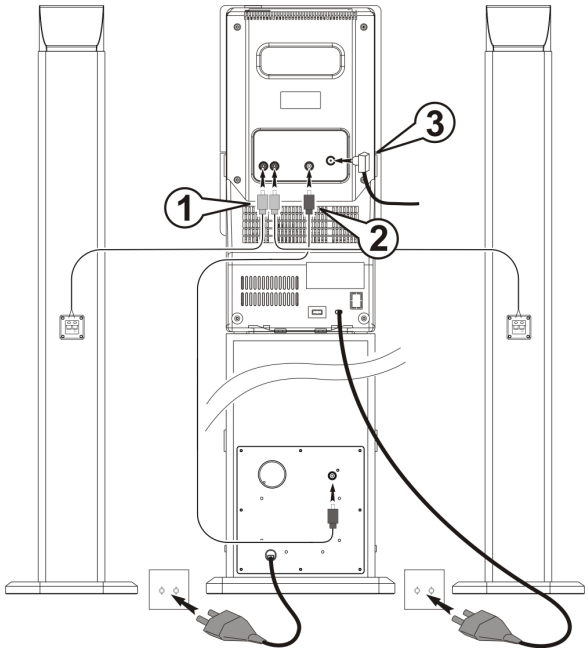

III) POWER SUPPLY

CONNECT THE AC POWER CORD FROM THE MAIN UNIT(28) AND AC POWER CORD FROM SUB-WOOFER UNIT(30)TO THE MAIN POWER SUPPLY FROM YOUR HOME AREA. TURN ON THE ON/OFF BUTTON AT MAIN UNIT (15) AND POWER ON THE SUB-WOOFER (14) RESPECTIVELY. IF THE LCD DISPLAY (2) AND THE POWER LED (14) IS LIGHT UP WITH BLUE LIHGT. IT MEANS THE SYSTEM IS NOW READY TO PLAY THE MUSIC.

SETTING THE CLOCK

1. SET UNIT IN STANDBY MODE.
2. PRESS THE “MEM/CLK-ADJ” BUTTON (17) ONCE, THE LCD DISPLAY (2) WILL SHOW “ 24 HR “. PRESS SKIP⏮ OR SKIP⏭ BUTTON (10) TO SELECT THE APPROPIATE AREA HOUR FORMAT(12HR/24HR). PRESS “MEM/CLK-ADJ” BUTTON (17) AGAIN TO CONFIRM.
3. THEN FIRST DIGIT OF “0:00” ON DISPLAY(2)(IF SELECT 24HS MODE) IS FLASHING. PRESS SKIP⏮ OR SKIP⏭ BUTTON (10) TO SET THE CORRECT HOUR. PRESS ”MEM/CLK-ADJ” BUTTON (17) TO STORE THE CORRECT HOUR.
4. THE THIRD & FOURTH DIGIT OF “0:00” IS FLASHING, PRESS THE SKIP⏮ OR SKIP⏭ BUTTON (10) TO SET THE CORRECT MINUTES. THEN PRESS “MEM/CLK-ADJ” (17) TO STORE THE CORRECT MINUTE.

➢ **THE PRE-SET TIME WILL BE RE-SET COMPLETELY IF DIS-CONNECTING THE MAIN POWER SUPPLY. YOU ARE RECOMMENDED TO SWITCH THE SYSTEM INTO STANDBY MODE FOR CONVENIENCE USAGE.**

LISTENING TO RADIO

MANUAL TUNING

1. PRESS FUNCTION BUTTON (16) TO SELECT “ TUNER ” MODE.
2. TUEN TO THE DESIRE STATION BY PRESSING THE SKIP/TUNE ⏮ OR SKIP/TUNE ⏭ BUTTON (10).
3. ADJUST THE MAIN VOLUME CONTROL (3) AND SUB-WOOFER VOLUME (29) TO THE DESIRED VOLUME AND BASS EFFECT LEVEL.

AUTO TUNING

1. PRESS FUNCTION BUTTON (16) TO SELECT “ TUNER ” MODE.
2. PRESS AND HOLD THE SKIP/TUNE ⏮ OR SKIP/TUNE ⏭ BUTTON (10) FOR 1-2 SECONDS AND THEN RELEASE.
3. THE UNIT WILL START SEEKING AUTOMATICALLY AND STOP UNTIL A RADIO STATION IS REACHED.
4. REPEAT STEP 3 & 4 UNTIL THE DESIRED RADIO STATION IS BEING REACHED.
5. ADJUST THE MAIN VOLUME CONTROL (3) AND SUB-WOOFER VOLUME (29) TO THE DESIRED VOLUME AND BASS EFFECT LEVEL.

PRESET STATIONS

YOU CAN STORE UP TO 20 RADIO STATIONS IN THE MEMORY (20 FM).

1. SET TO TUNER MODE.
2. TURN TO THE DESIRED RADIO STATION BY " MANUAL" OR " AUTO " TUNING METHOD.
3. PRESS " MEM/CLK-ADJ " BUTTON (17) TO ENABLE PROGRAM FUNCTION & " MEM " INDICATOR IS SHOW ON LCD (2)
4. PRESS " FOLDER / PRE-UP " BUTTON (18) TO SELECT THE DESIRED STATION MEMORY FOR STORAGE.
5. PRESS "MEM/CLK-ADJ" BUTTON (17) AGAIN TO CONFIRM THE SETTING.
6. REPEAT STEP 2 TO 5 TO STORE OTHER STATIONS.
7. NOW YOU CAN SELECT THE PRESETS STATIONS IN ORDER BY PRESSING THE "FOLDER/REP-UP" BUTTON (18) OR PRE-DN▼ BUTTON (ON REMOTE HANDSET)

- **THE PRE-SET MEMORIES WILL BE CANCELLED COMPLETELY IF DIS-CONNECTING THE MAIN POWER SUPPLY. YOU ARE RECOMMENDED TO SWITCH THE SYSTEM INTO STANDBY MODE FOR CONVENIENCE USAGE.**
- THERE ARE 10 SECONDS FOR PROGRAM STATE, AFTER 10 SEC. THIS STATE WOULD RESUME TO NORMAL TUNER MODE AUTOMATICALLY.
- YOU CAN OVERWRITE A PRESENT STATION BY STORING ANOTHER FREQUENCY IN ITS PLACE.

FM & FM-STEREO RECEPTION (BY REMOTE HANDSET)

- PRESS THE "ST-MO" BUTTON(19) OR "FM-ST / MONO". " BUTTON AT REMOTE HANDSET REPEATEDLY, THE FM PROGRAMS ARE RECEIVING IN MONO AND STEREO MODE REPEATEDLY. IN PARTICULAR WHEN STEREO SIGNALS ARE WEAK. IT IS PREFERABLE TO RECEIVE THE PROGRAM IN MONO.
- IF STEREO SIGNAL IS BEING RECEIVED, THE "ST" INDICATOR " (ST) " WILL APPEAR ON LCD (2) TO SHOW FM STEREO PROGRAM IS NOW RECEIVING.

HINTS FOR BEST RECEPTION:-

FM : CONNECT THE FM SOCKET (26) VIA A 75 OHM CABEL (NOT PROVIDED) FOR THE BEST RECEPTION.

PLAYING COMPACT DISC

- **GETTING START**

1. PRESS FUNCTION BUTTON (16) TO SELECT " CD " MODE,
2. PRESS "CD DOOR OPEN/CLOSE" BUTTON (4) TO OPEN THE CD DOOR.
3. PLACE A CD INSIDE THE TRAY WITH THE PRINTED SIDE FACING OUT & THEN CLOSE THE CO DOOR BY PRESSING THE " CD DOOR OPEN/CLOSE " BUTTON (4) AGAIN.
4. FOCUS SEARCH IS PERFORMING, THE LCD DISPLAY (2) WILL SHOW THE TOTAL NUMBER OF TRACKS & TOTAL PLAYING TIME.

- **PLAY / PAUSE MODE ▶II**

1. PRESS THE "ST/MO/▶II" BUTTON (19) TO START PLAYBACK, THE FIRST TRACK WILL START PLAYBACK.
2. TO INTERRUPT, PRESS THE "ST/MO/▶II" BUTTON (19) ONCE, AND THE PLAYING TIME WILL BE FREEZE & FLASHING ON THE LCD DISPLAY (2). PRESS AGAIN TO RESUME NORMAL PLAYBACK.

- **STOP MODE ■**

1. IF "STOP■ " BUTTON (9) IS PRESSED DURING PLAY OR PAUSE MODE, SYSTEM WILL GO TO STOP MODE.

- **SKIP MODE (SKIP UP ▶▶I / SKIP DOWN I◀◀)**

1. DURING PLAY OR PAUSE MODE, IF "SKIP UP▶▶I" BUTTON (10) IS PRESSED. IT WILL GO TO NEXT TRACK AND DISPLAY THE TRACK NO. AND THEN REMAIN THE PLAY OR PAUSE MODE.
2. DURING PLAY OR PAUSE MODE, IF "SKIP DOWNI◀◀" BUTTON (10) IS PRESSED. IT WILL GO BACK TO THE BEGINNING OF THE TRACK, ORIGINAL TRACK NO. IS DISPLAY AND REMAIN THE PLAY OR PAUSE MODE.
3. AFTER STEP 2, PRESS "SKIP DOWNI◀◀" BUTTON (10) AGAIN WILL GO TO THE PREVIOUS TRACK AND REMAIN THE PLAY OR PAUSE MODE.

- **FOR MP3 DISC**

1. AFTER FOCUS SEARCH IS PERFORMING, THE TOTAL NUMBER OF TRACK AND ABLUM WILL BE SHOWN ON THE LCD DISPLAY (2).
2. PRESS " FOLDER/ PRE-UP " (18) TO SELECT THE ALBUM NUMBER.
3. PRESS " SKIP UP▶▶I " OR SKIP DOWN I◀◀ (10) BUTTON TO SELECT THE TRACK NUMBER.
4. WHEN THE DESIRED TRACK AND ALBUM IS BEING SELECTED, PRESS THE "ST/MO/▶II" BUTTON (19) TO START PLAYBACK.

ID3 (TRACK/ALBUM TITLE) FUNCTION (BY REMOTE HANDSET)

PRESS THE " ID3 " BUTTON UNTIL THE LCD DISPLAY (2) SHOW " FILE - ··· " DURING PLAYBACK OF MP3/WMA FILE, THE SONG TITLE / ARTIST NAME / ALBUM NAME IS BEING DISPLAYED IN SEQUENCE . PRESS THE " ID3 " BUTTON AGAIN TO DISABLE THE FUNCTION.

REMARK:-

- **IN THAT CASE OF NO NAME HAD BEEN ASSIGNED FOR THE TRACK, " NO TITLE " OR " NO ARTIST " IS BEING DISPLAYED" ON LCD DISPLAY (2).**
- **NO TITLE/ALBUM NAME CAN BE RECOGNIZED IF THE INPUT FORMAT ON THE DISC/MASS MEDIA IS NOT SUPPORTING BY THE SYSTEM.**
- **THE SYSTEM SUPPORT ONLY ENGLISH TEXT FOR ID3 FUNCTION**

MP3 TRACK FORMAT REQUIREMENT:-

- BIT RATE : 32 KBPS~320KBPS, SAMPLING RATE : 32KHZ, 44.1KHZ AND 48 KHZ DECODABLE
- THE PERFORMANCE OF PLAYING MP3 DISC IS VARIOUS FROM THE QUALITY OF RECORDING DISC AND THE METHOD OF RECORDING. FURTHERMORE, THE SEARCHING LEAD-TIME FOR MP3-CD IS LONGER THAN NORMAL CD DUE TO DIFFERENCE FORMAT.

- **REPEAT/RANDOM MODE**

PRESS THE " PLAT MODE " BUTTON (7)DURING PLAYBACK TO SELECT REPEAT AND RANDOM FUNCTION, A SINGLE TRACK, SINGLE FOLDER (MP3 ONLY) OR ALL THE TRACKS CAN BE PLAYED IN DIFFERENCE MODE AS FOLLOW:-

FOR CD

(1) REPEAT 1 → (2) REPEAT ALL TRACK → (3) RANDOM → (4) OFF MODE

PLAY MODE	INDICATOR ON LCD DISPLAY
REPEAT TRACK	↻ & FLASHING
REPEAT ALL	↻
RANDOM	RAN
OFF MODE	----------

FOR MP3/WMA DISC/FILE

(1) REPEAT 1 → (2) REPEAT 1 FOLER → (3) REPEAT ALL TRACKS

(5) OFF MODE ← (4) RANDOM

PLAY MODE	INDICATOR ON LCD DISPLAY
REPEAT SINGLE TRACK	↻ & FLASHING
REPEAT SINGLE FOLDER	↻ FOLDER
REPEAT ALL TRACKS	↻
RANDOM MODE	RAN
OFF MODE	----------

- **REPEAT PLAY**

YOU CAN LISTEN THE DESIRED TRACKS OR FOLDER REPEATEDLY BY THIS FUNCTION.

- **RANDOM PLAY**

YOU CAN LISTEN ALL THE TRACKS OR FOLDER IN A RANDOM ORDER BY THIS FUNCTION

CD / MP3 DISC PROGRAMMING

UP TO 20 TACKS CAN BE PROGRAMMED FOR DISC PLAY IN THIS FUNCTION. BEFORE USE, BE SURE TO PRESS THE " STOP ■" BUTTON (9)

1. SET IN CD MODE & STOP THE CD OR CD-MP3 PLAYBACK.
2. PRESS THE "MEMORY/CLK-ADJ" BUTTON (17) , " MEM " WILL FLASH ON LCD DISPLAY (2). MOREOVER, IT WILL INDICATE PROGRAM NO. AND DIGITS FOR TRACK NO. TO BE PROGRAMMED – " 0 P- 01 ".
3. SELECT A DESIRED TRACK BY PRESSING SKIP UP▶▶| OR DOWN |◀◀ BUTTONS (10).
4. PRESS THE"MEMORY/CLK-ADJ" BUTTON (17) TO STORE THE TRACK INTO MEMORY.

5. REPEAT STEPS 3 AND 4 TO ENTER ADDITIONAL TRACKS INTO THE MEMORY IF NECESSARY.
6. WHEN ALL THE DESIRED TRACKS HAVE BEEN PROGRAMMED, PRESS ST/MONO►II" BUTTON (19) TO PLAY THE DISC IN ASSIGNED ORDER.
7. PRESS "STOP■" BUTTON (9) TO TERMINATE PROGRAM PLAY.

- AFTER PROGRAM COMPLETE, PRESS "MEMORY/CLK-ADJ" BUTTON (17)TO REVIEW THE TRACKS BEING PROGRAMMED.
- PRESS " STOP ■ " BUTTON (9) AT CD STOP MODE TO CANCEL ALL PROGRAMMED MEMORY.
- FOR MP3 DISC / FILE, PRESS THE " FOLDER / PRE-UP " BUTTON (18) TO SELECT THE 1ST TRACK OF NEXT FOLDER DIRECTLY AND HENCE TO SPEED UP THE SONG SLECTION.

LISTENING TO iPod

CONNECTING

BEFORE FITTING ANY DOCKABLE iPod MODEL ON THE DOCKING STATION (23) OF THE SYSTEM, PLEASE SELECT AND INSERT THE PROPER DOCKING CRADLE WHICH SUPPLIED WITH YOUR PARTICULAR iPod MODEL DURING PURCHASES OR PURCHASED SEPARATELY.

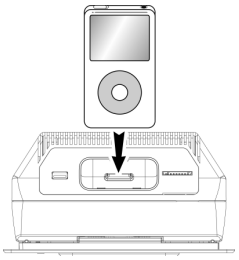

REMARK :
DO NOT INSERT WRONG DOCKING CRADLE AS IT MAY CAUSE A MALFUTION OF THE iPod AND THE SYSTEM.
THEN INSERT YOUR iPod AFTER INSERTING THE APPROPIATE DOCK ADAPTOR.

- **PLAYBACK**

1. PRESS FUNCTION BUTTON (16) TO SELECT " iPod " MODE. THE TEXT " iPod " WILL APPEAR ON THE LCD DISPLAY (2).AND THE SYSTEM WILL START PLAYBACK AUTOMATICALLY OR PRESS " PLAY/PAUSE ►II " BUTTON (19) TO START PLAYBACK.
2. PRESS THE SKIP UP►►I OR DOWN I◄◄ BUTTON (10) TO SELECT THE DESIRE MUSIC TRACK.
3. ADJUST VOLUME UP/DOWN CONTROL (3) AND SUB-WOOFER VOLUME (29) TO THE DESIRE VOLUME AND BASS EFFECT LEVEL.

- **CHARGING**

WHEN THE iPod IS DOCKED ON THE UNIT, THE BATTERY CAN BE CHARGED IN ALL FUNCTIONS MODE EXCEPT TUNER MODE.

- **iPod CONTROL FUNCTION KEYS (BY REMOTE CONTROL)**

YOU ARE RECOMMENDED TO CONTROL THE iPod UNIT BY USING FOLLOWING " i-MENU " BUTTONS INSTEAD OF PRESSING THE iPod UNIT DIRECTLY AFTER DOCKING ON THE SYSTEM.

4) PRESS " i-MENU " BUTTON TO CONTROL THE iPod MENU FUCNTION OF YOUR iPod UNIT.
5) PRESS " i-SCROLL " BUTTON TO CONTROL THE SCROLL UP/DOWN FUNCTION OF YOUR iPod UNIT.
6) PRESS " i-ENTER " BUTTON TO CONTROL THE ENTER FUNCTION OF YOUR iPod UNIT.

REMARK :
7) TO PREVENT DAMAGE OF THE DOCK CONNECTOR, DON'T TWIST THE iPod WHEN INSERTING OR REMOVING IT.
8) BE CAREFUL NOT TO KNOCK OVER THE iPod WHEN INSERTED TO PREVENT DOCK CONECTOR DAMAGE.
9) DON'T USE WITH ANY OTHER iPod ACCESSORIES, SUCH AS FM TRANSMITTERS AND MICROPHONES BECAUSE THEY MAY CAUSE A MALFUNCTION.

LISTENING TO TAPE

GENERAL OPERATION

STOP / EJECT KEY	PRESS TO STOP ALL DECK OPERATION. PRESS AGAIN TO OPEN THE CASSETTE DOOR.
FAST FORWARD ►►KEY & FAST REWIND ◄◄ KEY	PRESS TO START RAPID TAPE WINDING IN EITHER FORWARD OR REVERS DIRECTION. PRESS STOP/EJECT KEYS WHEN THE CASSETTE SPOOLS STOP TURNING.
PLAY ► KEY	PRESS TO START PLAYING TAPE.
PAUSE II KEY	PRESS TO STOP TAPE OPERATION TEMPORARILY. PRESS AGAIN TO RESUME PLAY.
RECORD ● KEY	PRESS TOGETHER WITH PLAY KEY TO START TAPE RECORDING.

PLAYBACK

- SELECT "TAPE" FUNCTION (16).
- PUT IN THE CASSETTE TAPE.
- PRESS " ►PLAY " KEY TO ACTIVE PLAYBACK
- ADJUST THE VOLUME AT MAIN UNIT (3) AND SUB-WOOFER (29) TO THE DESIRE LEVEL.
- USE PAUSE KEY WHEN YOU WANT TO STOP PLAYBACK TEMPORARILY.
- PRESS STOP / EJECT KEY WHEN FINISHED.

RECORDING

THE CASSETTE DECK CAN RECORD ALL FUNCTIONS MODEL (CD/TUNER/USB/SD/iPod) AS FOLLOWING PROCEDURES:-

- SELECT THE FUNCTION WHICH YOU WANT TO RECORD TO CASSETTE TAPE.
- INSERT A BLANK CASSETTE TAPE IN CASSETTE DECK.
- PRESS "●RECORD" & "►PLAY " KEY TO START RECORDING.
- START THE PLAYBACK OF THE MUSIC SOURCE WHICH YOU WANT TO RECORD TO TAPE
- PRESS "PAUSE" KEYS AND THEN "STOP/EJECT" KEY AT CASSETTE DECK WHEN FINISH.

PLAYBACK OF MP3/WMA SONG VIA USB STORAGE MEDIA OR MEMORY CARD

CONNECTING

THE SYSTEM IS ABLE TO DECODE AND PLAYBACK ALL MP3 FILE WHICH STORED IN THE MEMORY MEDIA WITH USB CONNECTING PORT, MULTI- MEDIA CARD (MMC) OR SECURE DIGITAL (SD) MEMORY CARD.

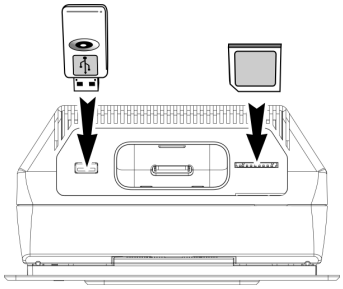

1. PRESS FUNCTION BUTTON (16) TO SELECT " USB OR CARD " MODE.
2. PLUG-IN THE USB PLUG WITH THE FACE UP & MAKE SURE IT GOING INTO COMPLETELY OR INSERT THE MEMORY CARD IN THE DIRECTION OF THE ARROW AS SHOWN IN THE LABEL ON THE UNDERSIDE OF THE MEMORY CARD SLOT COVER. INSERT STRAIGHT WITHOUT BENDING.

- **CONNECTING THE USB / MEMORY CARD UPSIDE DOWN OR BACKWARDS COULD DAMAGE THE AUDIO SYSTEM OR THE STORAGE MEDIA (USB / MEMORY CARD). CHECK TO BE SURE THE DIRECTION IS CORRECT BEFORE CONNECTION.**

3. THE SYSTEM WILL START READING THE STORAGE MEDIA AUTOMATICALLY AFTER CONNECTING, AND LCD DISPLAY (2) WILL SHOW THE TOTAL NUMBER OF MP3/WMA FILES AND TOTAL NUMBER OF ALBUM BEING DETECTED.
4. REPEAT THE SAME PLAYBACK PROCEDURE AS PLAYING CD/MP3 DISC AS ABOVE

REMARK

- **THE SYSTEM CAN DETECT AND READ THE FILE UNDER MP3 AND WMA FORMAT ONLY THROUGH THE USB PORT/MEMORY CARD SLOT**.
- **IF CONNECT THE SYSTEM TO MP3 PLAYER VIA THE USB SOCKET, DUE TO VARIANCES IN MP3 ENCODING FORMAT, SOME MP3 PLAYER MAY NOT BE ABLE TO PLAY VIA THE USB SOCKET. THIS IS NOT THE MALFUNCTION OF THE SYSTEM.**
- **USB PORT DOES NOT SUPPORT CONNECTION WITH USB EXTENSION CABLE AND IS NOT DESIGNED FOR COMMUNICATION WITH COMPUTER DIRECTLY.**

REMOVING OF USB / MEMORY CARD

TO REMOVE THE USB / MEMORY CARD, TURN OFF THE UNIT OR SWITCH THE FUNCTION MODE TO EITHER CD, OR TUNER FIRST. FOR USB PORT – UN-PLUG IT BY PULLING OUT THE USB SOCKET DIRECTLY, FOR MEMORY CARD – PRESS THE MEMORY CARD INWARD & THEN RELEASE, NOW THE CARD BEING PARTIALLY EJECT AND YOU CAN REMOVE IT BY HAND.

MORE FEATURES

A. SLEEP SETTING (BY REMOTE CONTROL)

1. PRESS "SLEEP" BUTTON AND SLEEP INDICATOR SHOWN ON THE LCD (2).
2. KEEP PRESSING THE BUTTON TO ADJUST THE SLEEP TIMER IN THE ORDER OF 90 > 75 >60….15 MINUTES.
3. SYSTEM WILL STOP AND GOTO STANDBY MODE AUTOMATICALLY AFTER THE SELECTED TIMING.
4. TO CANCEL THE SLEEP MODE, PRESS " SLEEP " BUTTON UNIT IT REACHS "OFF" MODE.

B. ALARM CLOCK SETTING (BY REMOTE CONTROL)

THIS FUNCTION ALLOWS THE SYSTEM TO TURN ON AUTOMATICALLY AND WAKE YOU UP BY CD, TUNER, USB, SD or iPod MODE RESPECTIVELY.

FIRST, SET THE UNIT AT STANDBY MODE AND THEN PRESS AND HOLD FOR A WHILE THE " ALARM " BUTTON (6) TO ENTER THE SETTING MODE, THE FIRST TWO DIGITS OF CLOCK AND INDICATOR " 1 "WILL FLASHING:

1) WAKE UP TIME : THEN PRESS SKIP UP ▶▶I/ DOWN I◀◀ " BUTTON (10) TO SET THE HOUR & THEN PRESS " ALARM " BUTTON (6) AGAIN TO CONFIRM. THEN PRESS SKIP UP ▶▶I/ DOWN I◀◀ " BUTTON (10) TO SET THE MINUTES & THEN PRESS THE " ALARM " BUTTON(6) TO CONFIRM.

1) WAKE UP SOURCE : PRESS THE "SKIP UP ▶▶I/ DOWN I◀◀ " BUTTON (10) TO SELECT THE SOURCE FROM "CD" - "SD/MMC " - " USB " - " TUNER" – " iPOD " REPEATLY. PRESS " ALARM" BUTTON(6) AGAIN TO CONFIRM SELECTED THE SOURCE .

2) WAKE UP VOLUME : PRESS SKIP UP ▶▶I/ DOWN I◀◀ " BUTTON (10) TO SET THE WAKE UP VOLUME LEVEL FROM 1 TO MAX. AND THEN PRESS "THE ALARM" BUTTON(6) TO CONFIRM

NOW THE ALARM SETTING IS COMPLETED AND THE ALARM INDICATOR " 1 " IS SHOWN ON LCD.

REMARK

- **IF THERE IS NO MUSIC SOURCE BEING DETECTED (SUCH AS CD) WHEN THE PRESET TIME IS REACHED, SYSTEM WILL DEFAULT TO " TUNER " FOR WAKE UP MODE AUTOMATICALLY.**
- **FOR TUNER WAKE UP, THE SYSTEM WILL PRESET AT THE LATEST RADIO FRQUENCY BEING LISTENED BEFORE SWITCHING OFF.**

- **ACTIVE/DE-ACTIVE ALARM FUNCTION**

1. TO ACTIVE THE ALARM, PRESS THE " ALARM " BUTTON(6) UNTIL THE ALARM INDICATOR " 1 " IS SHOWN ON LCD DISPLAY (2).
2. TO CANCEL ALARM FUNCTION BY PRESS AGAIN " ALARM " BUTTON(6) UNTIL THE TIMER INDICATOR " 1 " DISAPPEAR.

- **SNOOZE FUNCTION**

PRESS " SNOOZE " BUTTON ON REMOTE CONTROL ONCE TO TERMINATE THE ALARM MODE TEMPORARILY, AND SYSTEM WILL RE-START AGAIN AFTER 10 MINUTES ON EACH PRESS. TO CANCEL THE ALARM MODE, PRESS THE " ALARM " (6)BUTTON OR " POWER ON/STANDBY I/⏻ " BUTTON (15) WHILE SYSTEM IS ON.

C. MUTE FUNCTION (BY REMOTE HANDSET)

PRESS TO TERMINATE THE SOUND OUTPUT FROM SPEAKER TEMPORARILY AND PRESS AGAIN TO RESUME SOUND OUTPUT.

D. PRE-SET EQ FUNCTION (BY REMOTE CONTROL)

THIS UNIT PROVIDES 4 DIFFERENCES SOUND MODE TO ENHANCE YOUR LISTENING EXPERIENCE. YOU CAN SELECT THE DESIRED EFFECT BY PRESSING THE " PRESET EQ" BUTTON REPEATEDLY AT FOLLOWING SEQUENCE:-



REMOTE CONTROL TRANSMITTER

CONTROL FUNCTIONS

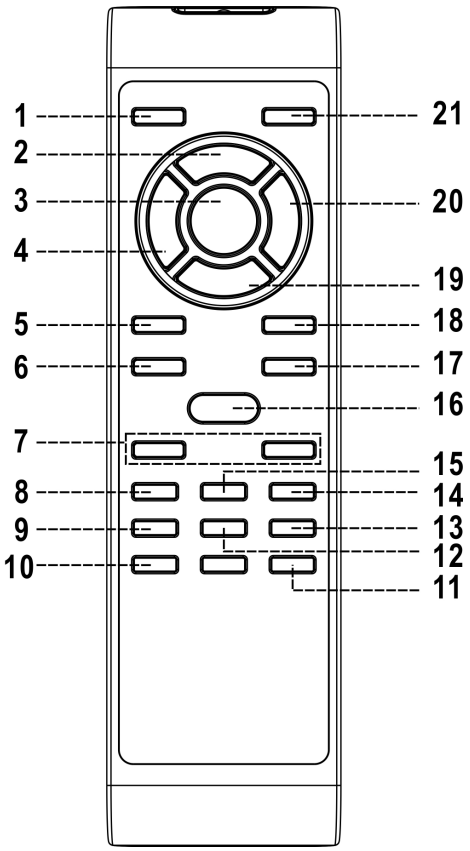

BATTERY INSTALLATION

THE INFRA-RED TRANSMITTER REQUIRE 2 PCS " AAA " BATTERY FOR OPERATION

BUTTON DESCRIPTION

1) POWER ON/STANDBY	PRESS TO SWITCH ON/STANDBY THE SYSTEM
2) MEMORY/CLK-ADJ	IN CD MODE : PRESS TO ACTIVE CD ROGRAM FUNCTION IN TUNER MODE : PRESS TO ACTIVE PRESET STATION MODE IN STANDBY MODE : PRESS TO ADJUST CLOCK
3) PLAY/PAUSE ▶II / ST/MO	IN CD/USB/SD/iPod MODE : PRESS ONCE TO START CD PLAYBACK. PRESS ONCE AGAIN TO STOP THE MUSIC PLAY TEMPORARILY IN FM TUNER MODE : PRESS TO SELECT FM STEREO OR MONO
4) SKIP/TUNE DOWN I◀◀	IN CD/USB/SD/iPod MODE : TO SELECT PREVIOUS TRACK IN TUNER MODE : PRESS TO STEP DOWN OF FREQUENCY
5) FOLDER/PRE DOWN ▼/ i-MENU	IN MP3 MODE : PRESS TO STEP DOWN THE MP3 FOLDER IN TUNER MODE : PRESS TO SELECT THE PRESET MEMORY DOWN IN IPOD MODE : PRESS TO CONTROL MENU FUNCTION OF iPod UNIT PRESS TO CONTROL SCROLL FUNCTION OF iPod UNIT
6) **i-SCROLL▼/-10**	IN CD/USB/SD MODE : PRESS TO SKIP -10 TRACKS IN IPOD MODE : PRESS TO CONTROL SCROLL FUNCTION OF iPod UNIT
7) VOLUME -/+	PRESS TO ADJUST VOLUME LEVEL UP/DOWN

8) i-SHUFFLE	IN iPod MODE : PRESS TO CONTROL SHUFFLE FUNCTION OF iPod UNIT
9) SLEEP	PRESS TO ACTIVE SLEEP FUNCTION
10) ALARM	PRESS TO ON/OFF AND SETTING THE ALARM FUNCTION
11) SNOOZE	IN ALARM MODE: PRESS ONCE TO ACTIVE SNOOZE FUNCTION AND PRESS TO
12) ID3	IN CD MP3/USB/SD MODE: PRESS TO ACTIVE/DE-ACTIVE ID3 FUNCTION
13) MUTE	PRESS TO ACTIVE MUTE FUNCTION
14) PRESET EQ	PRESS TO SELECT DIFFERENCE EQ MODE FOR LISTENING ENJOYMENT
15) i-REPEAT/PLAY MODE	IN iPod MODE : CONTROL REPEAT FUNCTION OF iPod UNIT IN CD/MP3 MODE: PRESS TO ACTIVE REPEAT AND RANDOM PLAY FUNCTION
16) CD DOOR OPEN/CLOSE	PRESS TO OPEN AND CLOSE THE CD DOOR
17) **i-SCROLL** UP▲/ +10	IN CD/USB/SD MODE : PRESS TO SKIP -10 TRACKS IN IPOD MODE : PRESS TO CONTROL SCROLL FUNCTION OF iPod UNIT
18) FODER/PRE UP▲/ i-ENTER	IN MP3 MODE : PRESS TO STEP UP THE MP3 FOLDER TUNER MODE : PRESS TO SELECT THE PRESET MEMORY UP IN IPOD MODE : PRESS TO CONTROL ENTER FUNCTION OF iPod UNIT
19) STOP■	IN CD/USB/SD MODE : PRESS TO STOP THE CD/USB/SD PLAYING
20) SKIP/TUNE UP▶▶I	IN CD/USB.SD/iPod MODE : TO SELECT NEXT TRACK IN TUNER MODE : PRESS TO STEP UP OF FREQUENCY
21) FUNCTION	PRESS TO SELECT THE FUNCTIONS (CD/TUNER/BLUETOOTH/USB/SD/AUX)

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)